

<u>Knowledgebase</u> > <u>IP Surveillance</u> > <u>Integration with Axis Perimeter Defender</u>

Integration with Axis Perimeter Defender

Support Team - 2017-07-14 - Comments (0) - IP Surveillance

Summary

AXIS Perimeter Defender is a data analytics tool designed to trigger events based on behaviors. It requires a plugin to be installed on both the Smart Client and the Management Client.

Content

AXIS Perimeter Defender is a data analytics tool designed to trigger events based on behaviors. It requires a plugin to be installed on both the Smart Client and the Management Client. It can be used with both XProtect Professional/Enterprise and XProtect Expert/Corporate.

Milestone plug-in feeds metadata coming from AXIS Perimeter Defender to the Recording Server. The records are available for live and playback view in the Smart Client.

The most common forms of detection that can be used to trigger alarms are:

Intrusion: When objects (usually people & cars) enter a predetermined zone

Zone crossing: When an object passes through two predetermined zones in a predetermined order and direction.

Loitering: When the object remains in a predetermined zone for more than a certain number of seconds.

Conditional zone crossing: When a person or a vehicle enters a predetermined zone without starting in or passing through one or more predetermined zones.

Note: AXIS Perimeter Defender can also detect multiple events occurring simultaneously in different places within the range of a single camera.

The camera actions such as I/O control, notification and edge storage are communicated to Milestone.

Milestone Integration plug-in installs both:

- AXIS Perimeter Defender Metadata Bridge
- MIP Plugins for AXIS Perimeter Defender

Pre-requisites:

- Licensing: an additional DLK is needed (see manual for further info)
- Microsoft .net 4.0.
- Corporate 2014 or Expert 2014 or a later version
- AXIS Perimeter Defender

AXIS Perimeter Defender prerequisites:

- Visual C++ (any version)
- Visual C++ redistributable for Visual Studio (14.0.23026 or higher)
- Video codecs (Xvid)

Use AXIS Perimeter Defender application to install the Axis Camera Application Platform (ACAP) and license key, calibrate perspective, and define scenarios on the camera.

See Axis manuals for more information.

Third-party links to Axis:

• Axis-Milestone Integration manual:

https://www.axis.com/files/manuals/um_perimeterdefenderwithmilestone vms_1587512_en_1612.pdf

Axis Perimeter Defender, an overview:

http://www.axis.com/global/en/products/axis-perimeter-defender/overvie w

- Tags
- <u>ACAP</u>
- Axis camera
- Axis Perimeter Defender
- <u>IP Surveillance</u>
- Milestone
- <u>VMS</u>
- XProtect